 
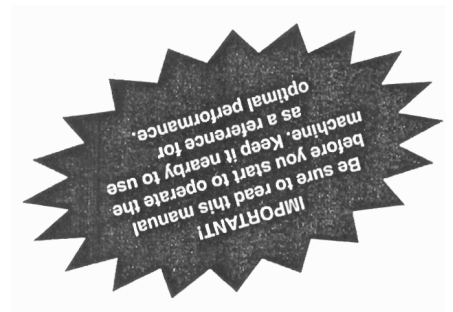 


FOR MODEL: MS 25 Premier plus

ROYAL®

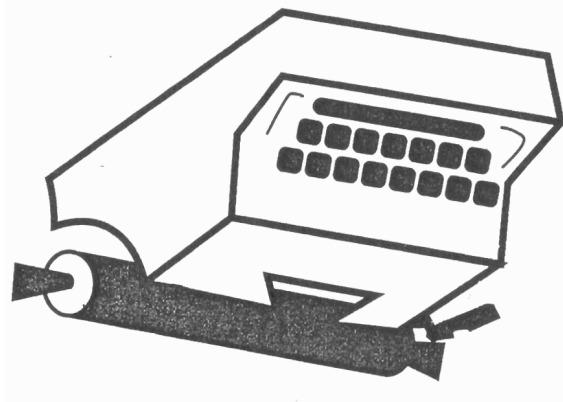

USER MANUAL

PORTABLE MANUAL TYPEWRITER

MAINTENANCE

We recommend that your Olivetti typewriter be adjusted, repaired and serviced by Olivetti Technical Service personnel. If you need help or if you have questions, please contact your distributor.

NOTE: To improve performance, use only Olivetti original spare parts and consumables. The use of non original spare parts and consumables, including the ribbon, may result in failure or damage to your equipment.

Please keep your typewriter in a place protected from extreme temperatures and humidity.


If you want to clean your typewriter never use products such as detergent, sprays or any corrosive substance.

Never try to disassemble or repair your typewriter. Repairs must be done by an Authorized Technical Olivetti Service Center.

PRODUCT SUPPORT HOTLINE:

For questions on use of this product call 732-563-9944 Monday through Friday between the hours of 8:30 AM and 5:00 PM. EST You can also email at hotline@royal.com.


INSTRUCTIONS FOR UNPACKING

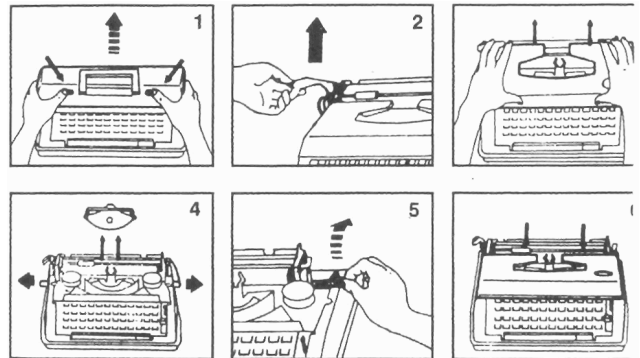

ROYAL®

Royal Consumer Information Products, I
379 Campus Drive
Somerset, NJ 08875 USA

KEY FUNCTIONS

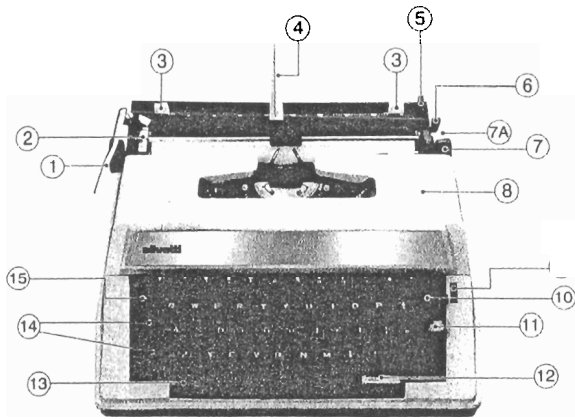

1. Line Spacing Lever.

By using this lever the carriage moves to the right at the same time that the paper moves forward one line.

2. Variable Line Spacing Selector.

It has 3 line spacing positions: 1, 1 _ and 2. In the 0 position it stays blocked.

3. Margin Fixing Knob.

When pressed, the margin knob stop can be moved to the left or right to set the desired typing width. Five spaces before the stop is reached a bell will make a warning sound. (Also see "15").

4. Paper Back Support.

Paper support can be raised to hold sheet upright in full view while typing.

5. Paper Release Lever.

If when introducing the paper, it is tilted, by pushing this lever back the paper may be straightened. To continue typing it is necessary to put the lever back in its original position.

6. Carriage Release.

Pull the lever forward to allow the carriage to run freely.

7. Platen Knobs.

By turning these knobs, paper may be introduced or removed from the typewriter.

7.A Carriage Lock Lever.- Move carriage to the right, press the lever and then take carriage all the way to the right until it locks. The lever cannot be pressed when the shift lock is down.

8. Spool Cover.

To remove the cover that protects the ribbon spool, simply lift it by the back edge and lift it.

9. Ribbon selector

Put the selector in the desired color (black or red).

10. Back Space.

Pressing this key moves the carriage back one space.

11. Tab Key.

The tabulator key has 7 default positions.

12. Space Bar with Automatic Repetition.

By pressing the AUTOMATIC key, the carriage will move more quickly to the desired position.

13. Space Bar.


The carriage moves one space every time the space bar is pressed.

14. Shift Lock.

To type capital letters or symbols, simply press the desired capital letter of the keys of shift. The shift key can be locked by pressing shift lock. To return to lower case letters press again any of the shift keys.

15. Margin Release.

Pressing this key allows for typing past the set margins, either to the left or right side.

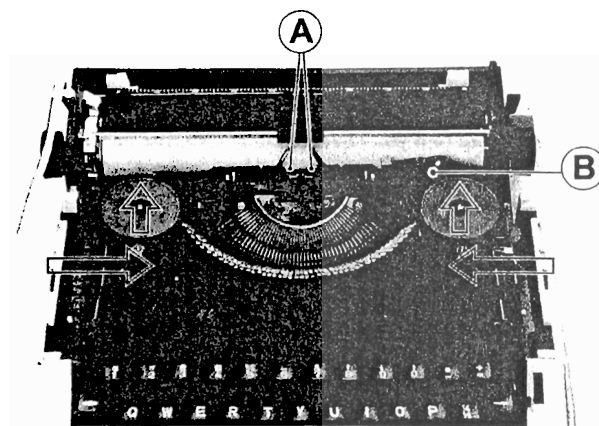

Step 4

Remove old ribbon from only one spool, keeping the other, the same used for the new tape.

Step 5

Place the new ribbon in the machine by putting the full spool onto the left post with the black section of the ribbon on top.

Step 6

Place the ribbon in the "ribbon guide B", in such a way that the eyebolts of the ribbon remain between its corresponding "ribbon guide" and spool.

Step 7

Put the spool cover back in place on the typewriter.

RIBBON REPLACEMENT

Step 1

Lift the spool cover.

Step 2

Lift both ribbon spools upwards, be careful not to pull them.

Step 3

Remove the ribbon towards the top of the "ribbon guide".